 
 
 
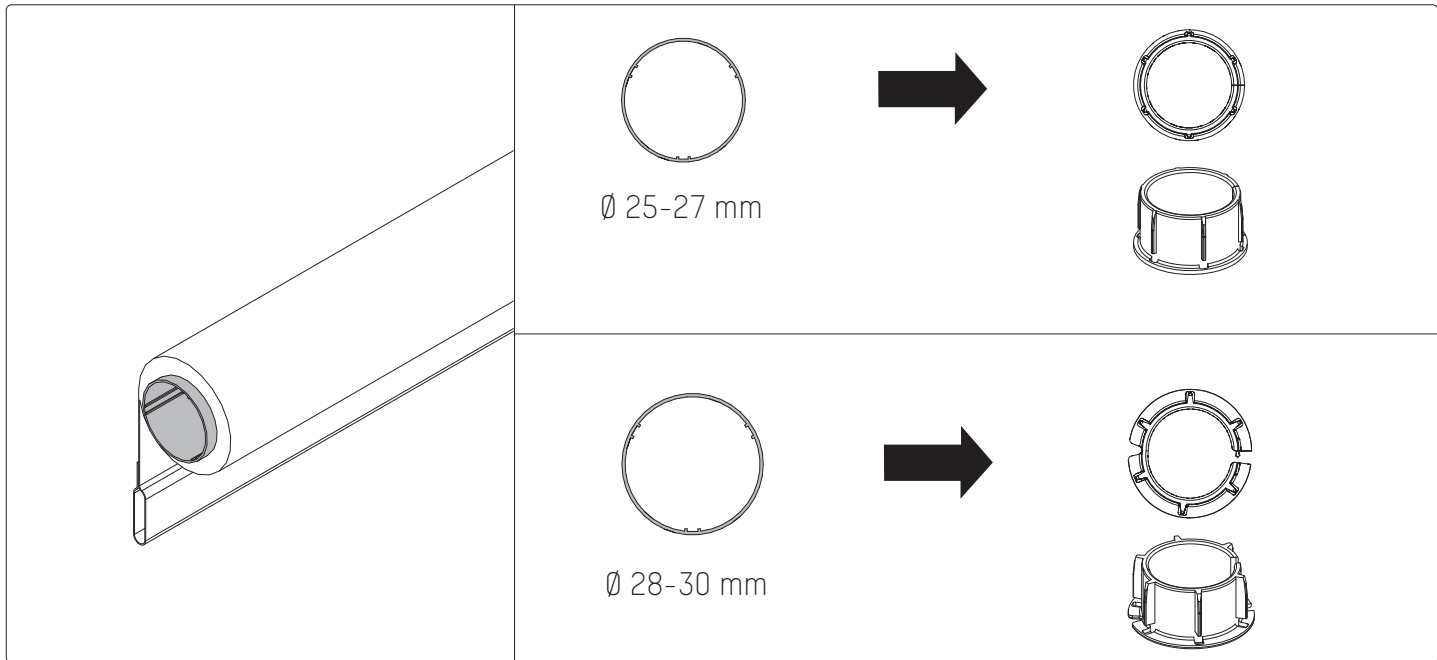 
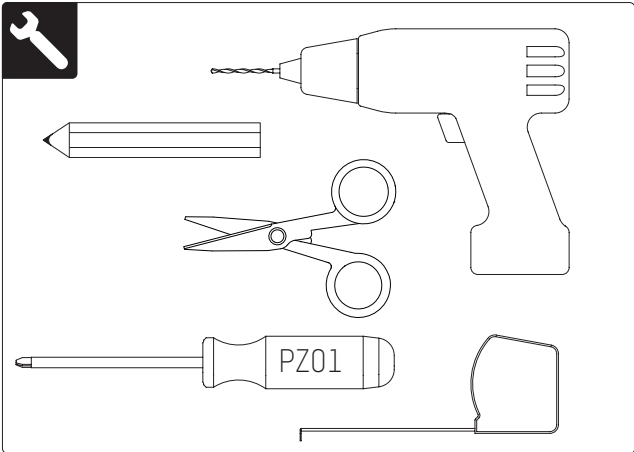 
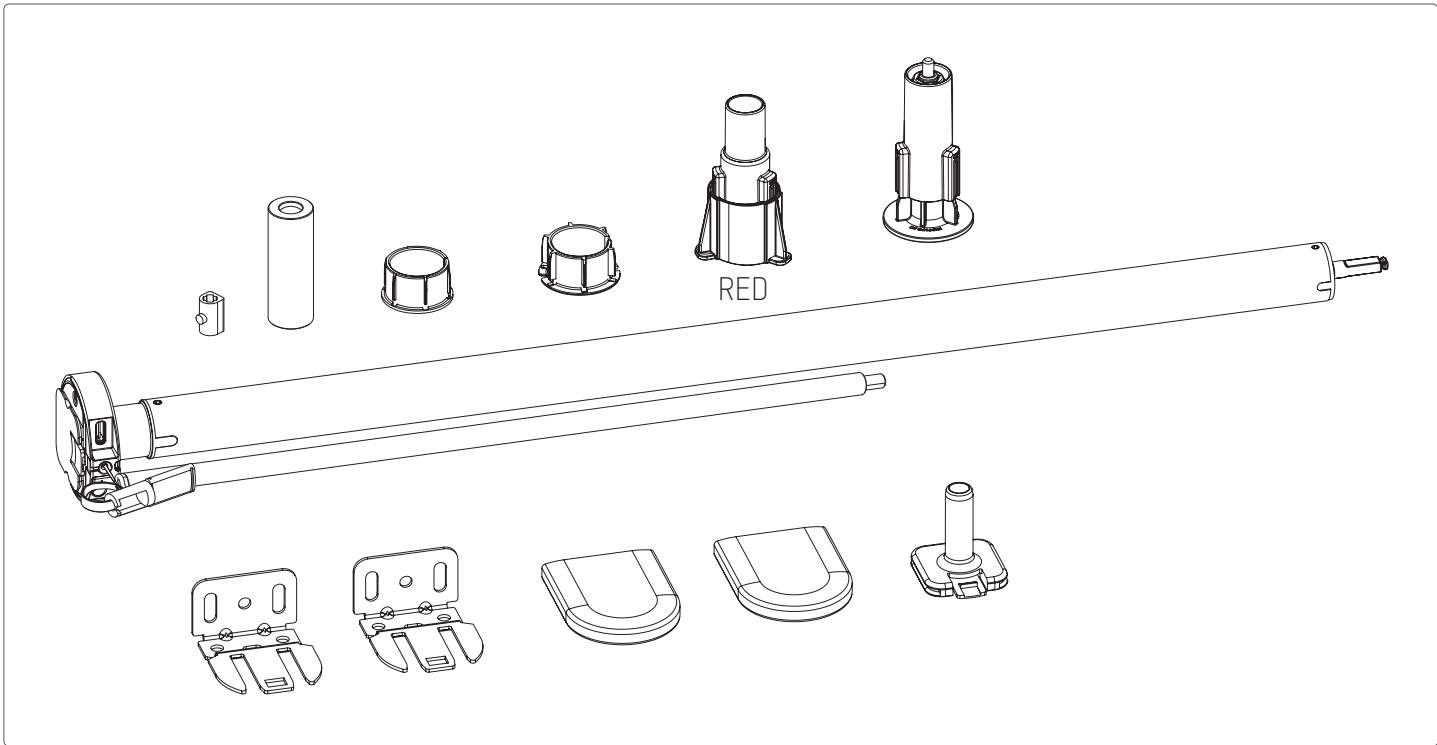 
 
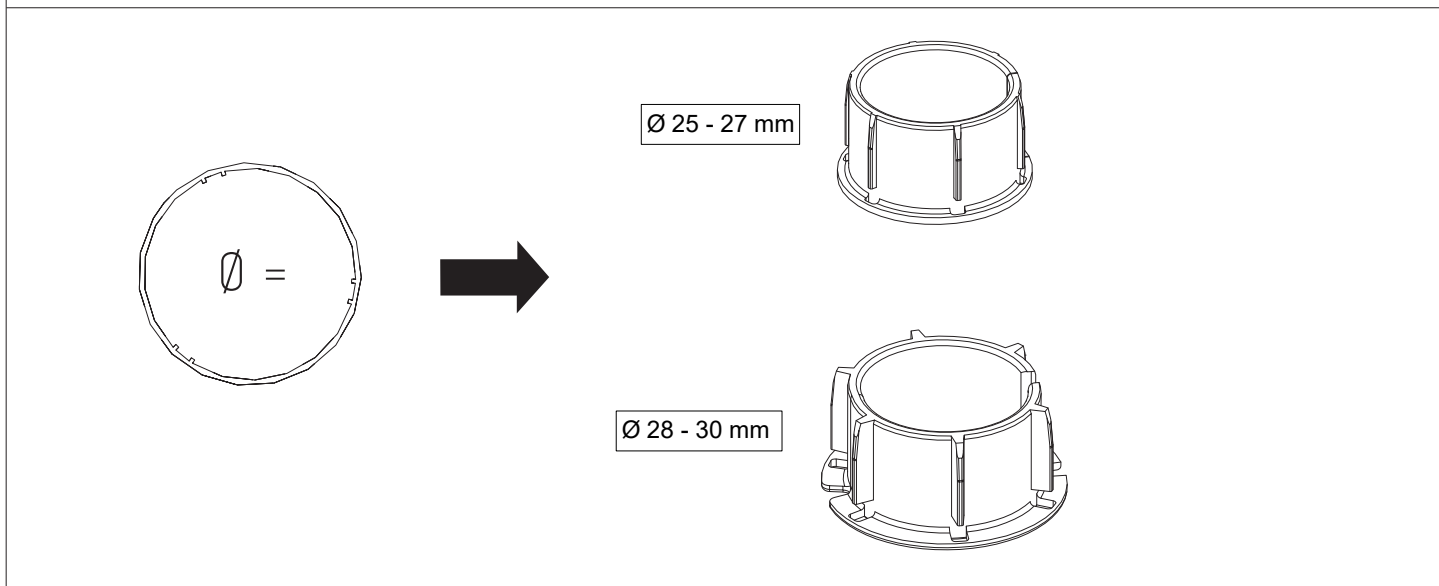 


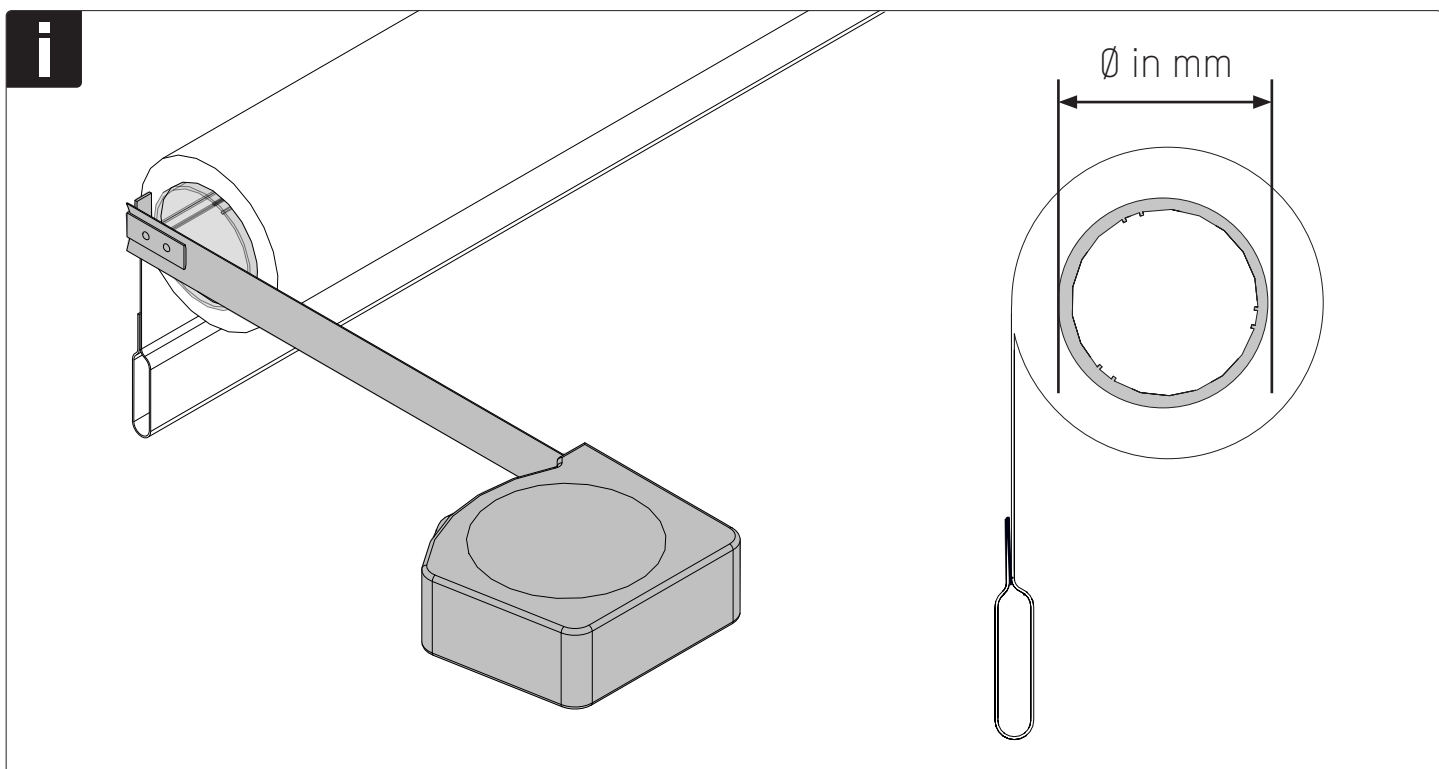


MN250097\_20251009

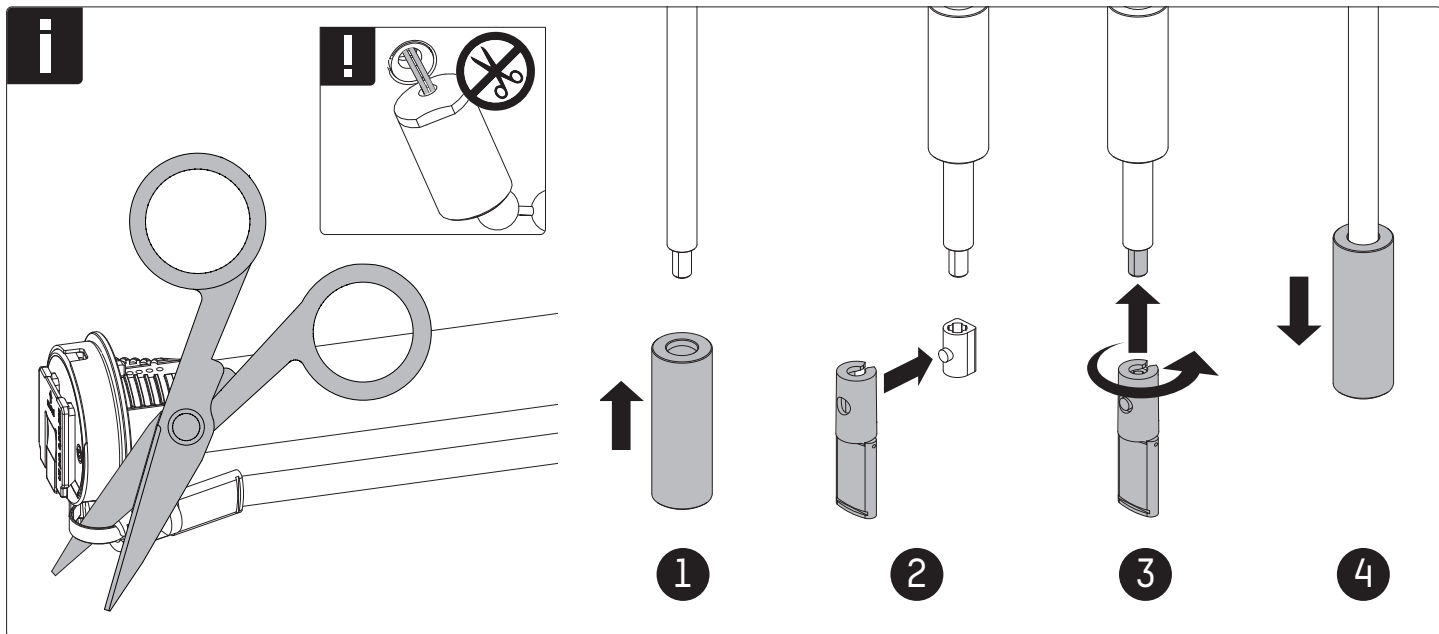



1

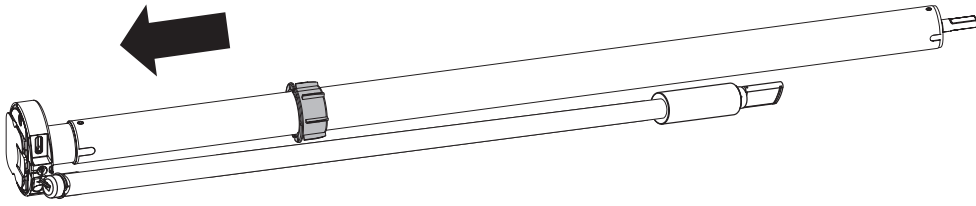

 
1

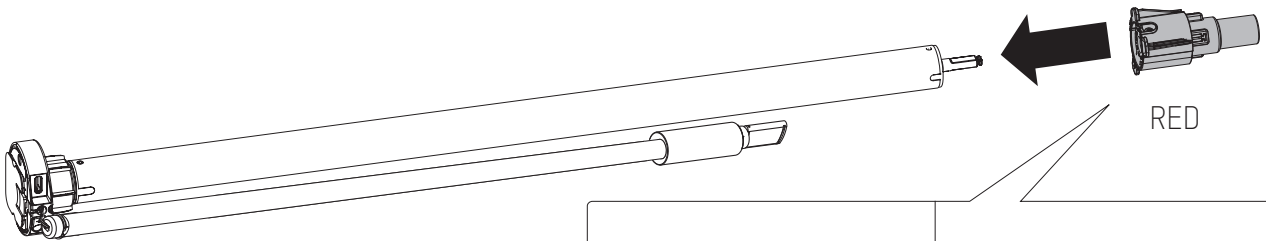

2

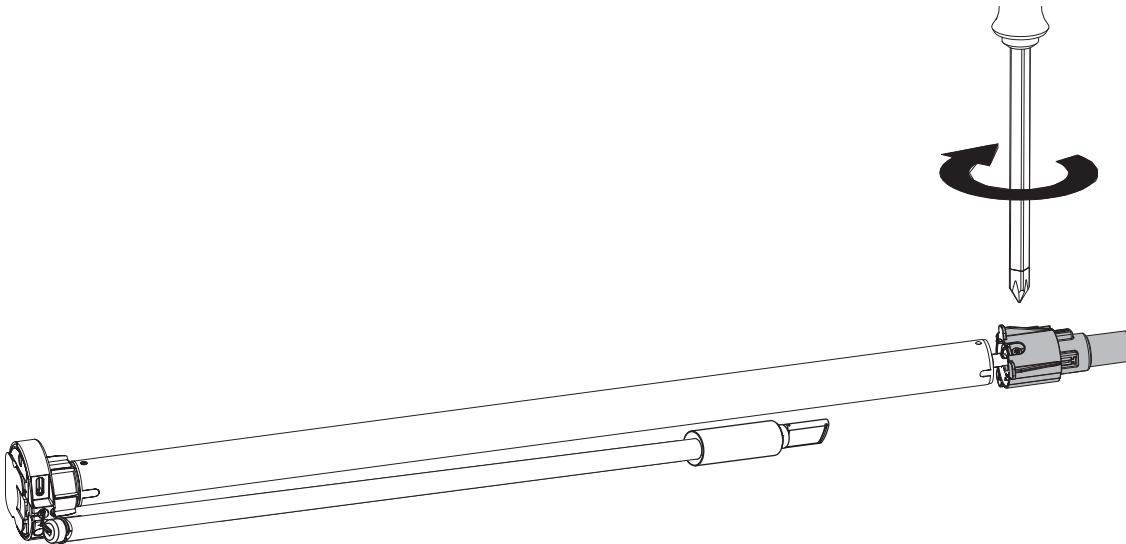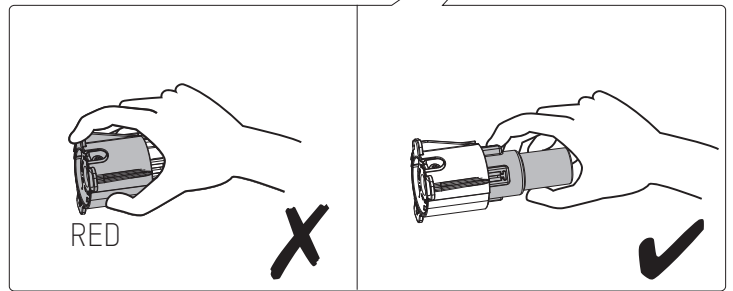  

3

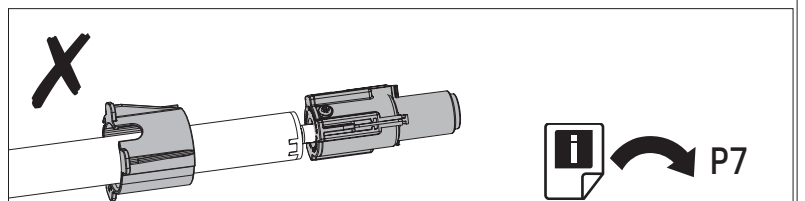 


2





1


2

3

      
3

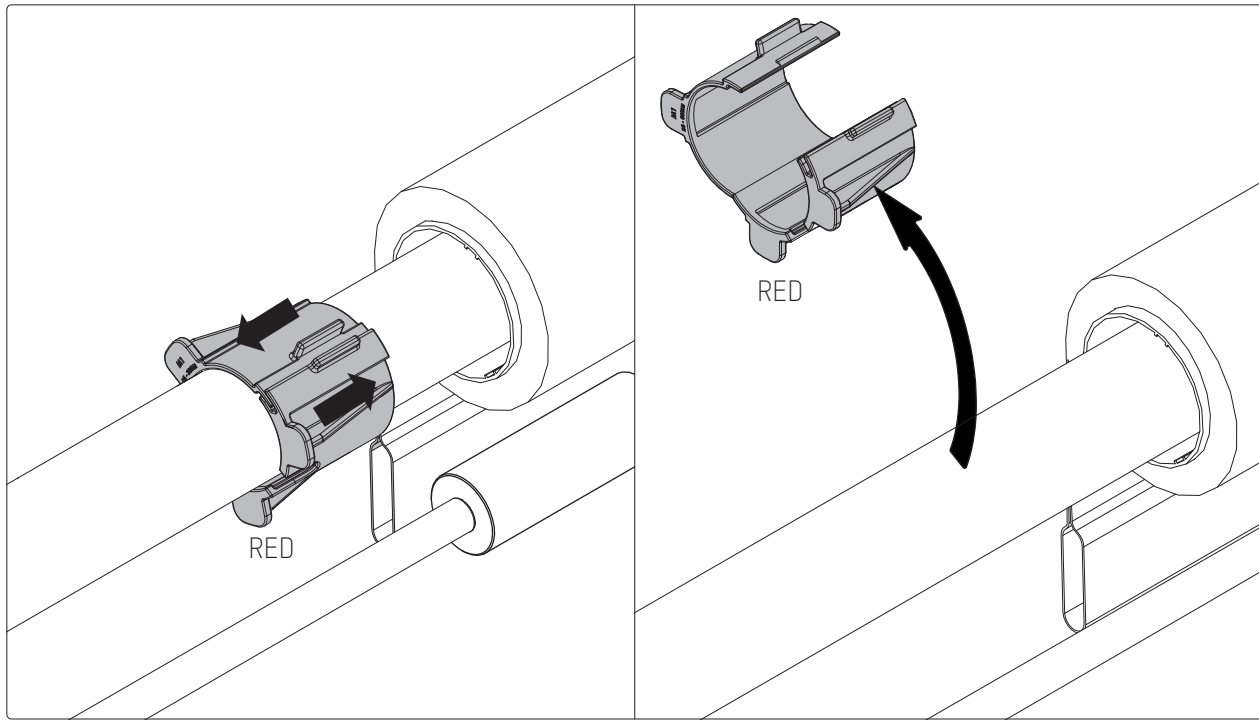

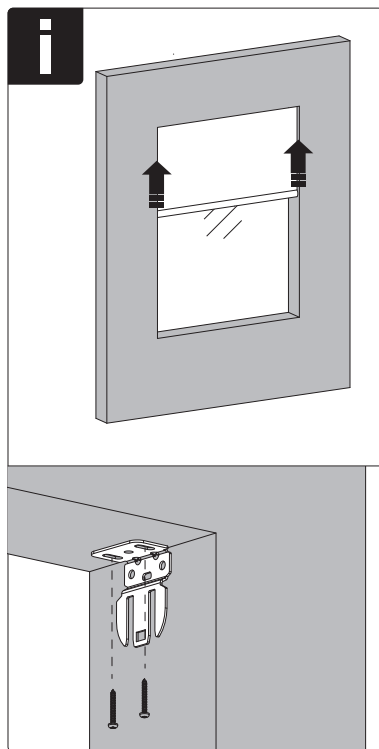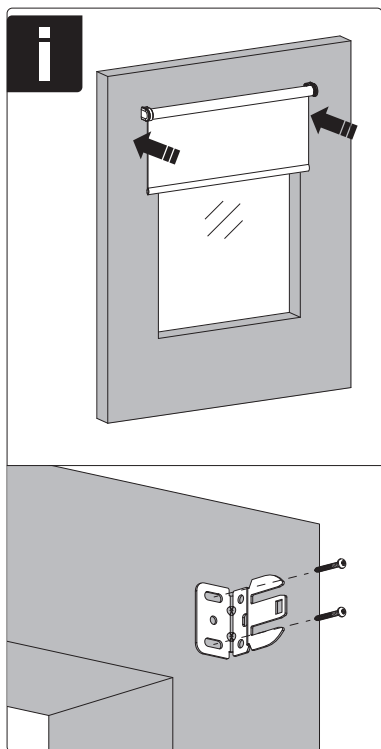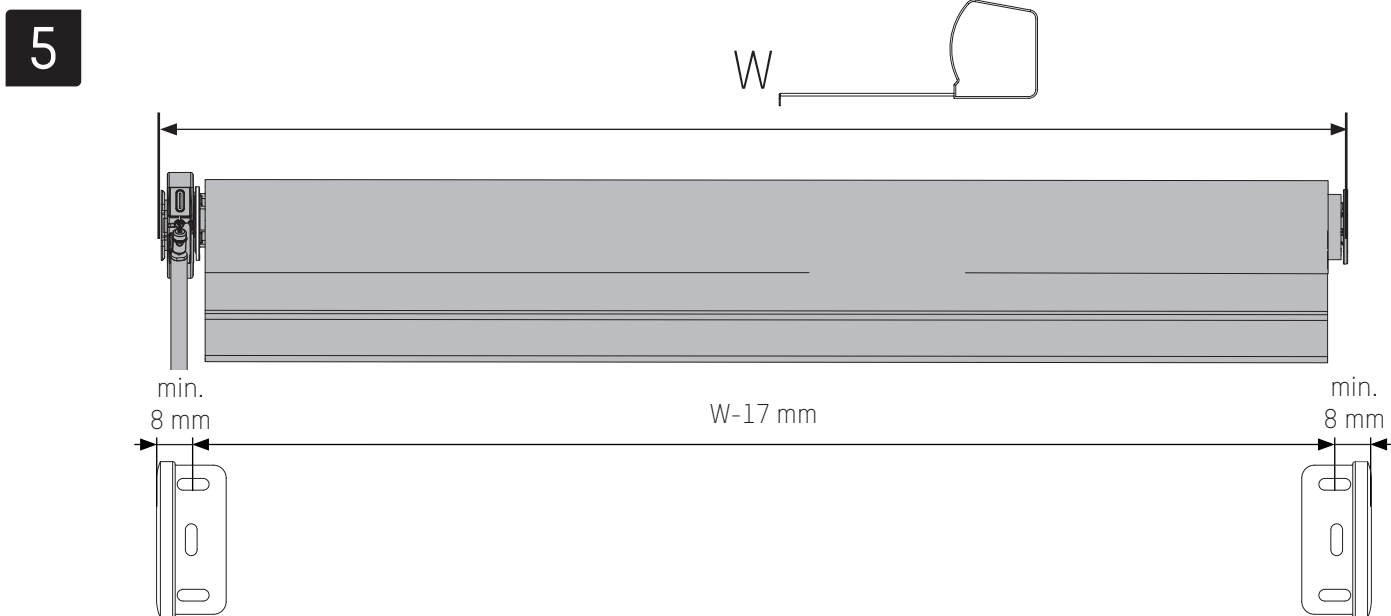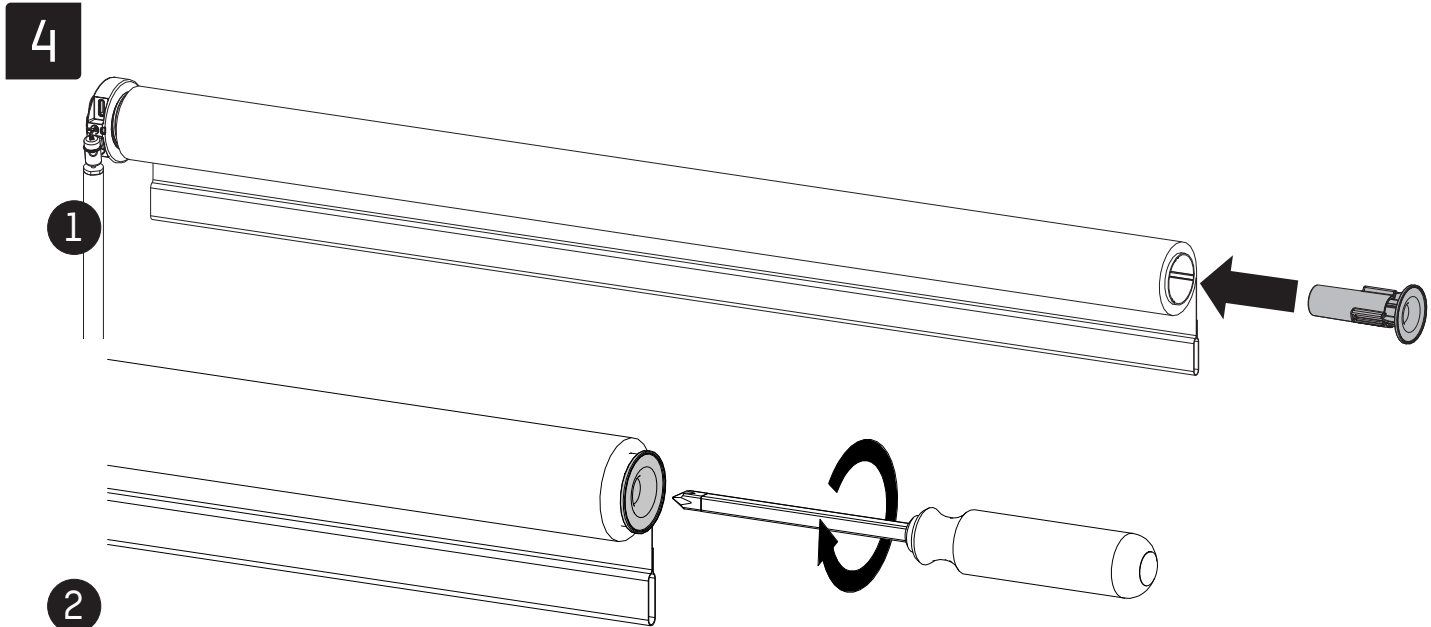








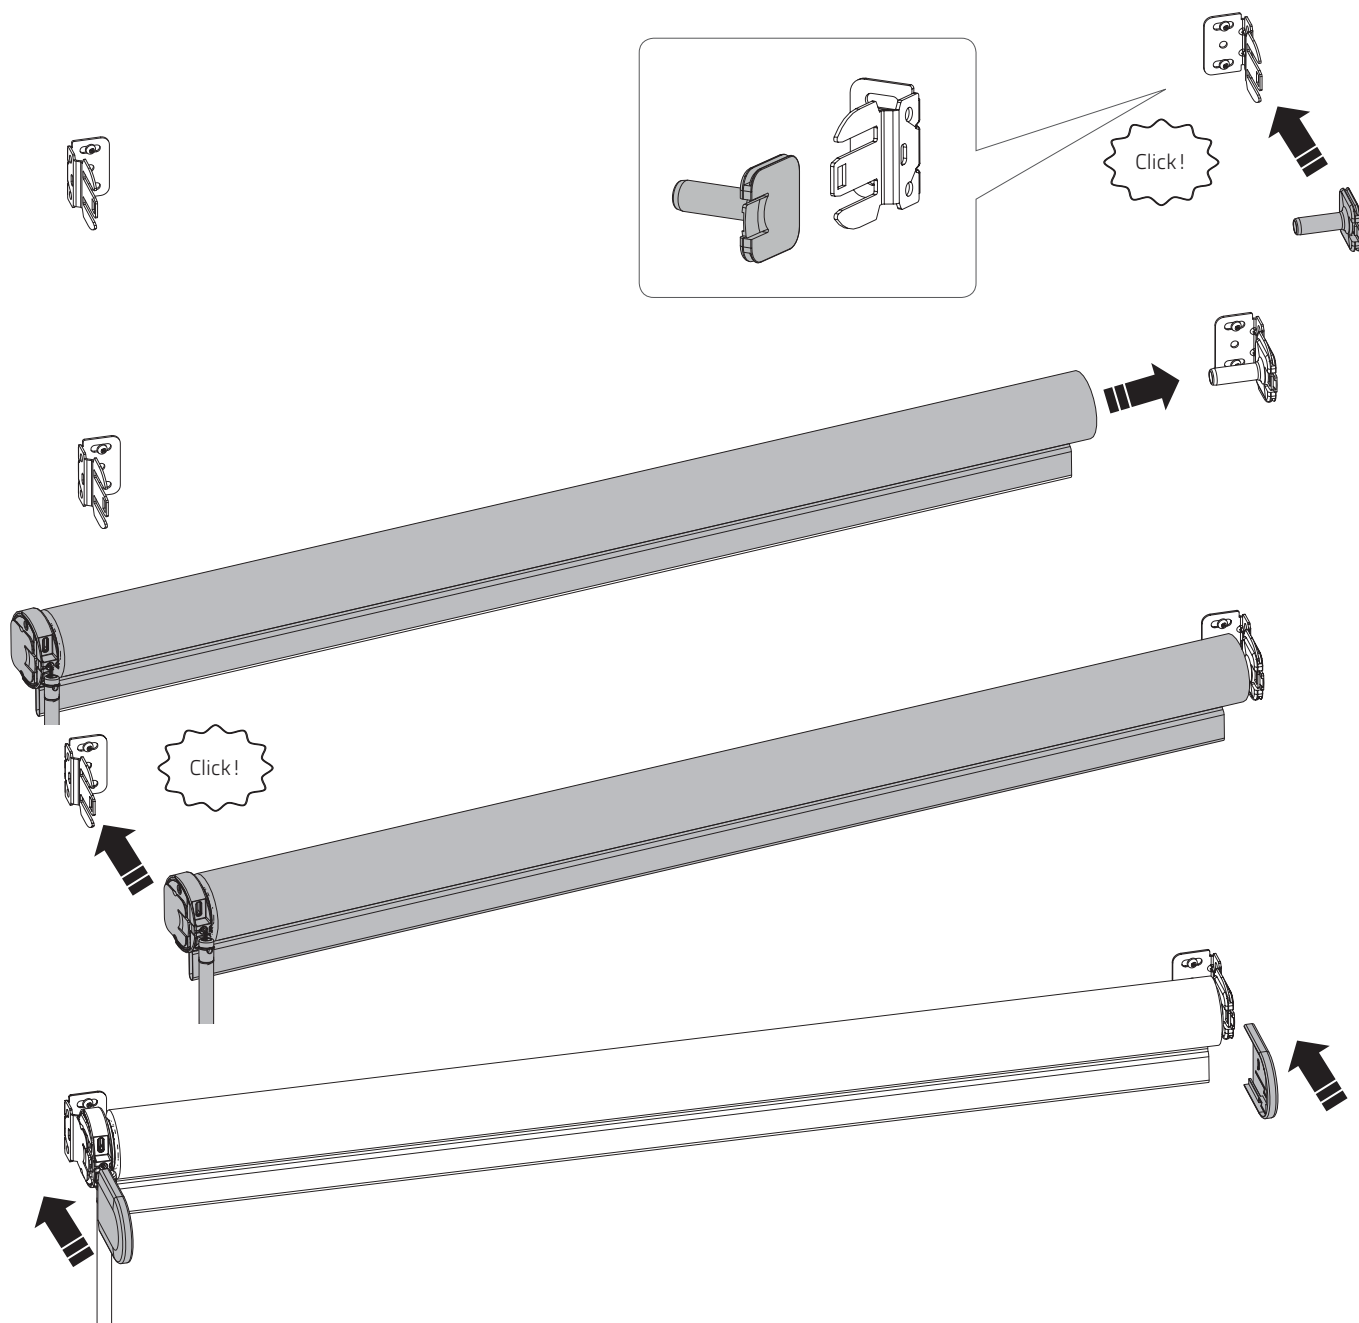


 Follow the steps in the manual CM-03-E/CM-45-E to activate the blind:

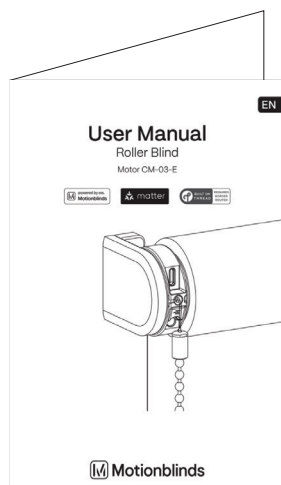



## Troubleshoot

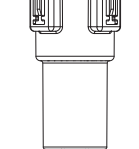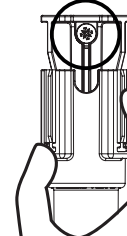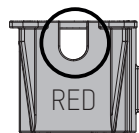        

For more information and support:



[rtube.nl/red1910](https://rtube.nl/red1910)